

03251582

**krom
schroder**

(D) (GB) (F) (NL) (I) (E) (DK) (S) (N) (P) (GR)
(TR) (CZ) (PL) (RUS) (H) → www.docuthek.com

Operating instructions

Burner control unit BCU 46x, 480



Cert. version 03.19

Contents

Burner control unit BCU 46x, 480	1
Contents	1
Safety	1
Checking the usage	2
Installation	3
Replacing the power module/bus module/ parameter chip card	4
Cable selection and installation	5
Wiring	5
Connection diagram	7
Flame control	12
Adjustment	13
Commissioning	14
Manual mode	15
Assistance in the event of malfunction ...	16
Reading off the flame signal, fault messages and parameters	25
Parameters and values	26
Legend	29
Technical data	29
Safety instructions	30
Logistics	31
Accessories	31
Certification	32
Disposal	33
Contact	34

Safety

Please read and keep in a safe place



Please read through these instructions carefully before installing or operating. Following the installation, pass the instructions on to the operator. This unit must be installed and commissioned in accordance with the regulations and standards in force. These instructions can also be found at www.docuthek.com.

Explanation of symbols

■, **1**, **2**, **3**... = Action
 > = Instruction

Liability

We will not be held liable for damage resulting from non-observance of the instructions and non-compliant use.

Safety instructions

Information that is relevant for safety is indicated in the instructions as follows:

DANGER

Indicates potentially fatal situations.

WARNING

Indicates possible danger to life and limb.

! CAUTION

Indicates possible material damage.

All interventions may only be carried out by qualified gas technicians. Electrical interventions may only be carried out by qualified electricians.

Conversion, spare parts

All technical changes are prohibited. Only use OEM spare parts.

Changes to edition 09.19

The following chapters have been changed:

- Connection diagram
- Adjustment
- Assistance in the event of malfunction
- Technical data
- Logistics
- Certification
- Disposal

Checking the usage

Burner control units BCU 460, 465 and 480 are designed to control, ignite and monitor gas burners in intermittent or continuous operation. They replace the local control cabinet. Air and gas flow monitoring as an option.

The outputs for controlling the burners, e.g. for actuator and valves, are activated via the replaceable power module LM 400. All the parameters required for operation are saved on the integrated parameter chip card.

BCU 460, BCU 465

For directly ignited burners of unlimited capacity.

BCU 480

For pilot and main burners of unlimited capacity. Pilot and main burners can be monitored independently.

LM..F0

Power module without air control interface.

LM..F1, LM..F3


Power module with air control interfaces to connect an air valve (LM..F3) or actuator IC 40 (LM..F1).

This function is only guaranteed when used within the specified limits – see page 29 (Technical data). Any other use is considered as non-compliant.

Type code


Code	Description
BCU 4	Series 4 burner control unit
60	Series 460
65	Series 465
80	Series 480
Q	Mains voltage: 120 V AC, 50/60 Hz
W	230 V AC, 50/60 Hz
1	Ignition transformer duty cycle: 100%
2	20%
3	100%
8	33%
P0	Flange plate: none
P1	standard
P2	M32
P3	industrial plug connector, 16-pin
P6	PROFIBUS
P7	conduit
C0	No valve proving system
C1	With TC and POC valve proving system
C2	With POC valve proving system
D0	No high temperature operation
D1	For high temperature operation
D2	Flameless operation
0	Input functions: none
1	auxiliary gas
2	LDS
3	auxiliary gas and LDS
0	Pressure switches: none
1	air pressure switch
2	gas pressure switch
3	air and gas pressure switch
K0	No connection plugs
K1	Connection plugs with screw terminals
K2	Connection plugs with spring force terminals
E0	Energy supply: via safety interlocks
E1	via L1

Code	Description
LM	Power module
400	For series 4
Q	Mains voltage: 120 V AC, 50/60 Hz
W	230 V AC, 50/60 Hz
F0	Air actuator: none
F1	with IC 40 interface
F3	with air valve control
O0	Optional outputs: none
O1	not fail-safe
O2	fail-safe
E0	Energy supply: via safety interlocks
E1	via L1
K0	No connection plugs
K1	Connection plugs with screw terminals
K2	Connection plugs with spring force terminals

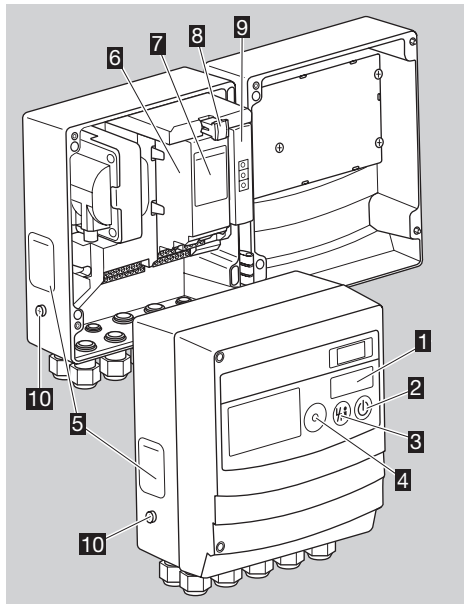

- 1** LED display for program status and fault messages
- 2** On/Off button
- 3** Reset/Information button
- 4** Connection for opto-adaptor
- 5** BCU type label
- 6** Power module, replaceable
- 7** Power module type label
- 8** Parameter chip card, replaceable
- 9** Bus module, replaceable
- 10** M5 screw terminal for burner ground


Type designation (**A**), identification number (**B**), construction stage (**C**), year/week of manufacture (**D**), device number (**E**), device ID (**F**), voltage (**G**), frequency (**H**), ambient temperature in Celsius (**I**)/Fahrenheit (**J**), enclosure (**K**) – see type label.

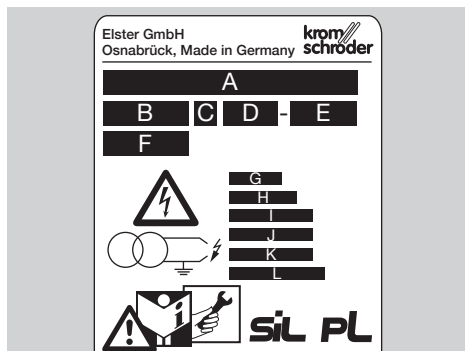


! CAUTION

Please observe the following to ensure that the BCU is not damaged:

- The device must not be installed in a public place. It must be accessible to authorized personnel only. Unauthorized personnel could make changes which could cause the system to become unsafe or dangerous.
 - Dropping the device can cause permanent damage. In this event, replace the entire device and associated modules.
- ▷ The following components are sealed: **1** upper housing section, **2** power module, **3** bus module, **4** HMI. The BCU may only be installed and operated with undamaged seals.

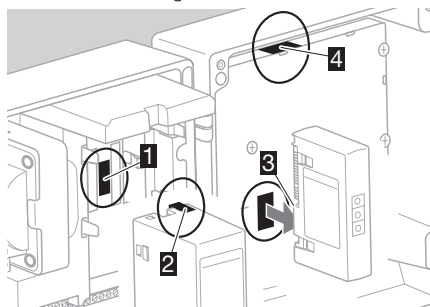

- ▷ Installation position: vertical (cable glands pointing downwards) or down flat.

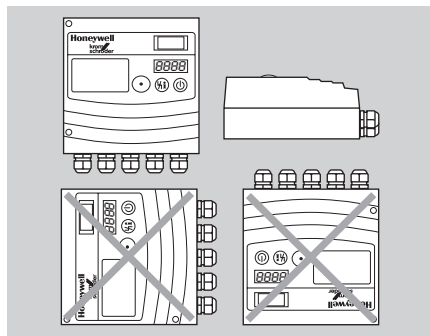


- ▷ Distance between BCU and burner: recommended < 1 m (3.3 ft), max. 5 m (16.4 ft).
- ▷ Affix the sticker (with the program step/fault message description) in the required language (available as an accessory).

Screwing on the BCU

From inside:

- 1 Open the cover of the BCU.

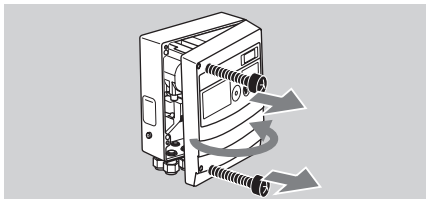


- 2 Screw on the BCU with four screws, Ø 4 mm, min. length 15 mm.

Or

To the rear:

- ▷ The unit remains closed.

- 1 Attach the BCU with four self-tapping screws.

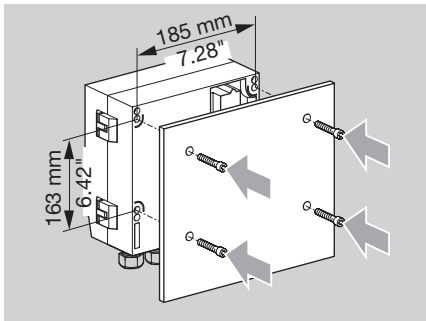

- ▷ Self-tapping screws (M6 x 20 mm) are supplied with the unit.
- ▷ Other mounting options are available as accessories:

Mounting	Order No.
Fastening set	74960422
External securing bars	74960414

Identification

- ▷ Each burner control unit can be labelled individually.

- 1 Pull out the labelling plate at the top right of the housing.



- 2 Label as required and slide back in.

Replacing the power module/bus module/parameter chip card

! CAUTION

Please observe the following to ensure that the BCU is not damaged:

- **Different power supply** for the gas valves. The following combinations of BCU and LM are allowed:

BCU 4xx..E1 + LM..E1:

power supply via L1,

BCU 4xx..E0 + LM..E1:


power supply via terminal 35,

power supply for air outputs via L1,

BCU 4xx..E0 + LM..E0:

power supply via terminal 35.

- 1 Disconnect the unit from the electrical power supply.
 - 2 Open the cover of the BCU.
 - 3 Remove the connection plug from the power and bus module.
- ▷ Power module and bus module are secured in the BCU by retaining lugs **A**. The retaining lugs must be pushed away from the respective module carefully so that the power or bus module can be removed.
- 4 Remove the modules in the following order to facilitate handling:
 1. power module,
 2. bus module,
 3. parameter chip card (PCC).

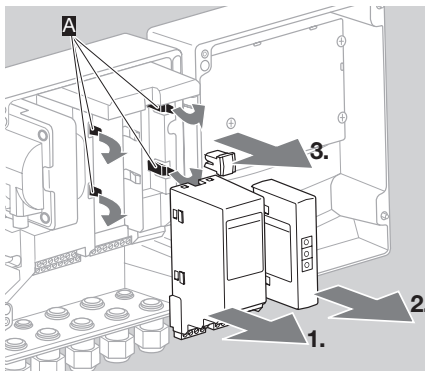

- ▷ Installation of the modules in reverse order.

Cable selection and installation

- ▷ Signal and control line for screw terminals max. 2.5 mm² (min. AWG 24, max. AWG 12), for spring force terminals max. 1.5 mm² (min. AWG 24, max. AWG 12).
- ▷ For the ionization and ignition cables, use un-screened high-voltage cable: FZLSi 1/7 up to 180°C, Order No. 04250410, or FZLK 1/7 up to 80°C, Order No. 04250409.
- ▷ The control lines must be selected in accordance with local/national regulations.
- ▷ External electrical interference must be avoided.
- ▷ Do not route BCU cables in the same cable duct as frequency converter cables or cables emitting strong fields.

Ionization cable, UV cable

- ▷ Cable length: for internal ignition max. 5 m (16.4 ft), for external ignition (double-electrode operation or UV control) max. 50 m (164 ft); observe the requirements of the ignition transformer.
- ▷ The flame signal is adversely affected by EMC influences.
- ▷ Lay cables individually (with low capacitance) and, if possible, not in a metal conduit.

PROFIBUS, PROFINET, EtherNet/IP


- ▷ Use only cable and plug components which comply with the appropriate fieldbus specifications.
- ▷ PROFIBUS, PROFINET and EtherNet/IP are unencrypted fieldbus protocols without authentication mechanisms.
- ▷ Use shielded RJ45 plugs.
- ▷ Cable length: max. 100 m between 2 subscribers.
- ▷ PROFINET/PROFIBUS installation guidelines, see www.profibus.com.
- ▷ Ethernet installation guidelines, see www.odva.org.

Wiring

! CAUTION


Please observe the following to ensure that the BCU is not damaged:

- Burner ground must be connected to the BCU in order to avoid uncontrolled spark formation, especially in the case of single-electrode operation.
 - **Different power supply** for the gas valves. The following combinations of BCU and LM are allowed:
BCU 4xx..E1 + LM..E1:
 power supply via L1,
BCU 4xx..E0 + LM..E1:
 power supply via terminal 35,
 power supply for air outputs via L1,
BCU 4xx..E0 + LM..E0:
 power supply via terminal 35.
 - For use in an ungrounded mains system or for mains supply between phases, install an isolating transformer with single-side grounding.
- ▷ Do not reverse phase L1 and neutral conductor N.
 - ▷ Do not connect different phases of a three-phase current system to the inputs.
 - ▷ Check the following screw connections for the correct tightening torque so as to ensure safe grounding of housing, cover, (connection) flange plate and electronics unit as well as a good PE (ground) wire connection between the BCU and burner:

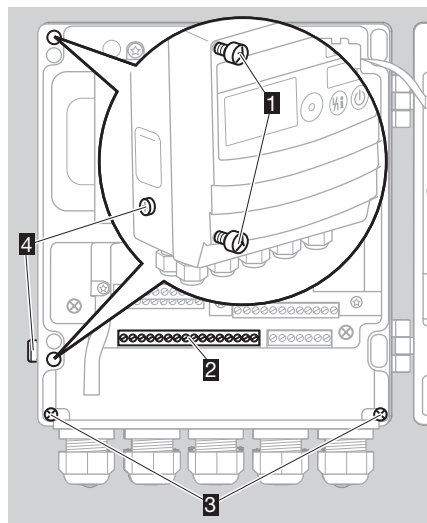


- 1** Cover screws: 2.4 Nm
- 2** PE terminals
- 3** Flange plate screws: 2.4 Nm
- 4** M5 screw terminal for burner ground: 1.8 Nm

- ▷ Use plastic cable glands/conduit couplings with multiple cable grommet. These can be detached with the plug-in connection terminals.
- ▷ Do not supply voltage to the outputs.
- ▷ A short-circuit on the outputs causes one of the replaceable fuses to trip.
- ▷ Do not set the remote reset so that it operates (automatically) in cycles.
- ▷ Wire the safety circuit inputs via contacts (relay contacts) only.
- ▷ The limiters in the safety interlock (e.g. safety temperature limiter, emergency stop) must isolate terminal 35, as well as the optional safety-relevant inputs, e.g. at terminals 36 to 41, if these are parameterized, from the voltage supply. If the safety interlock is interrupted, the display shows a blinking [5.] as a warning signal and all of the BCU's gas valve outputs are disconnected from the electrical power supply.
- ▷ Connected control elements must be equipped with protective circuits in accordance with the manufacturer's instructions. The protective circuit prevents high voltage peaks which can cause malfunctioning of the BCU.
- ▷ Install the ignition cable in the BCU in the designated cable duct **1** and feed it out of the BCU on the shortest possible route via the cable gland **2**.

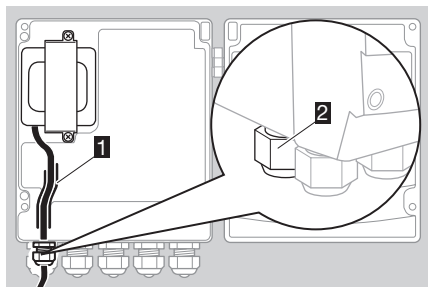

- ▷ Observe the maximum duty cycle for the ignition transformer (see manufacturer's instructions). Adjust the minimum pause time t_{BP} (parameter A062) correspondingly, if required.
 - ▷ All functions of the inputs at terminals 1 to 7 and 35 to 41, as well as of contacts 80 to 82, 85 to 87, 90 to 92 and 95 to 97, depend on parameters I050 to I074.
- 1** Disconnect the system from the electrical power supply.
 - 2** Before wiring, ensure that the yellow parameter chip card has been inserted in the BCU.

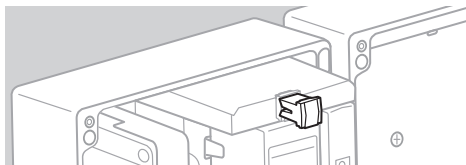

- ▷ Screw terminals or spring force terminals are available for the BCU:
Screw terminals, Order No. 74924876,
spring force terminals, Order No. 74924877.
- 3** Wire as shown on the connection diagram, see from page 7 (Connection diagram).
 - 4** After wiring, close the housing cover again and tighten the cover screws to 2.4 Nm.

BCU 460/LM..F0


-



BCU 460/LM..F3

▷ The connection diagram shows BCU..E1 with LM..E1.


▷ Legend – see page 29 (Legend).

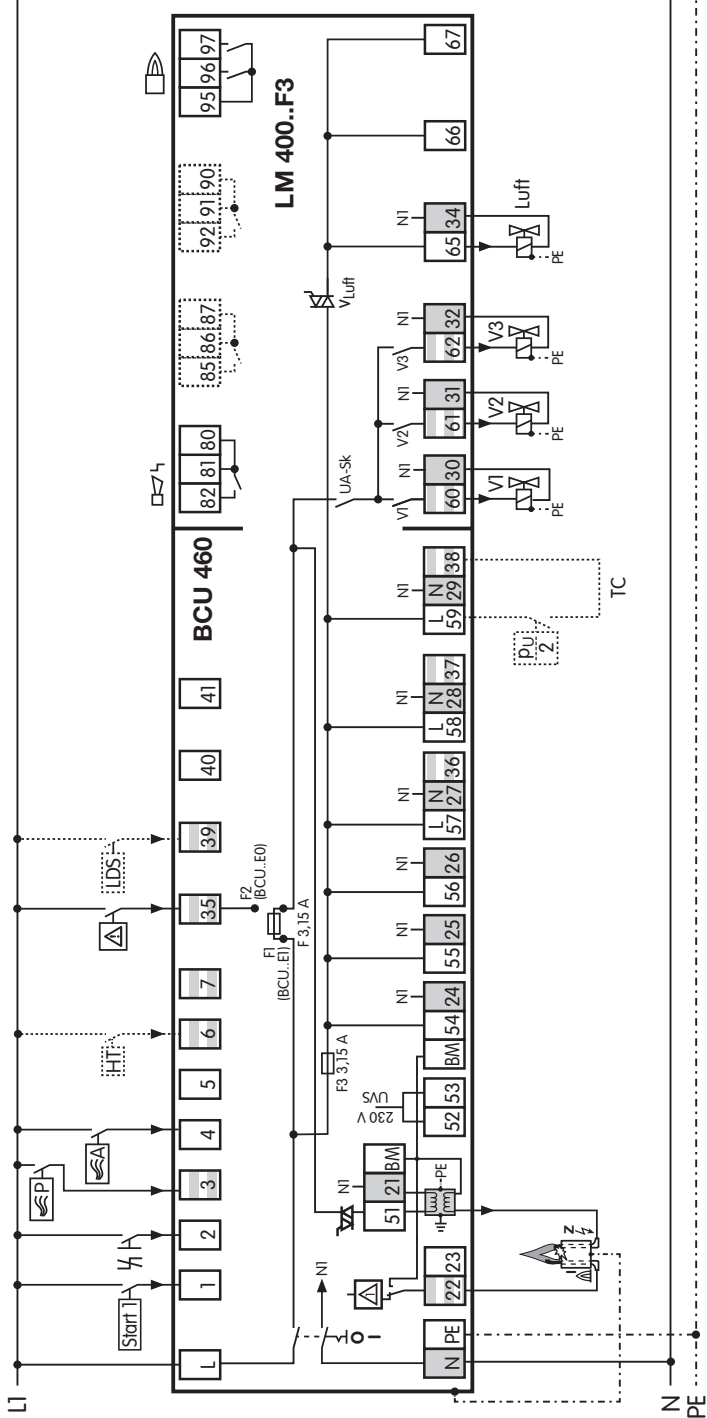

BCU 465/LM..F3

- ▷ The connection diagram shows BCU..E1 with LM..E1.


▷ Legend – see page 29 (Legend).

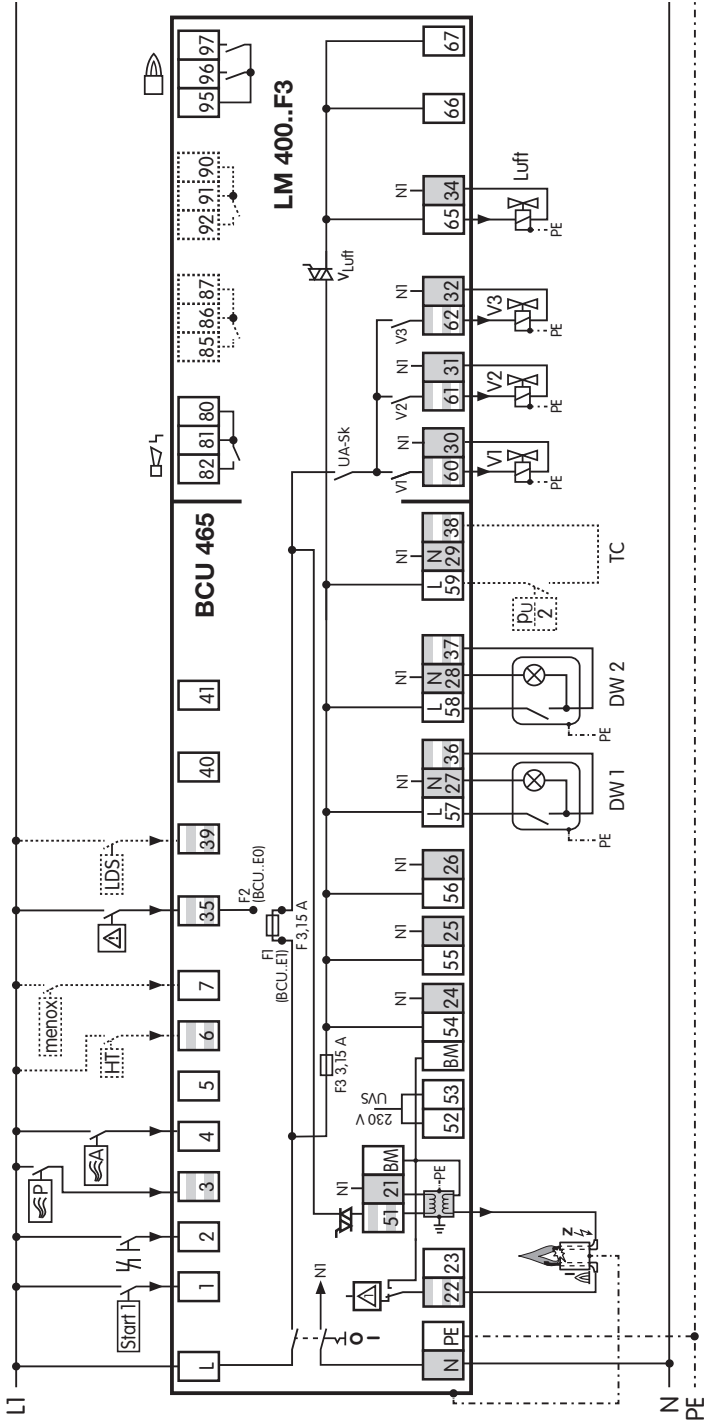

BCU 480/LM..F3


▷ The connection diagram shows BCU..E1 with LM..E1.

▷ Legend – see page 29 (Legend).

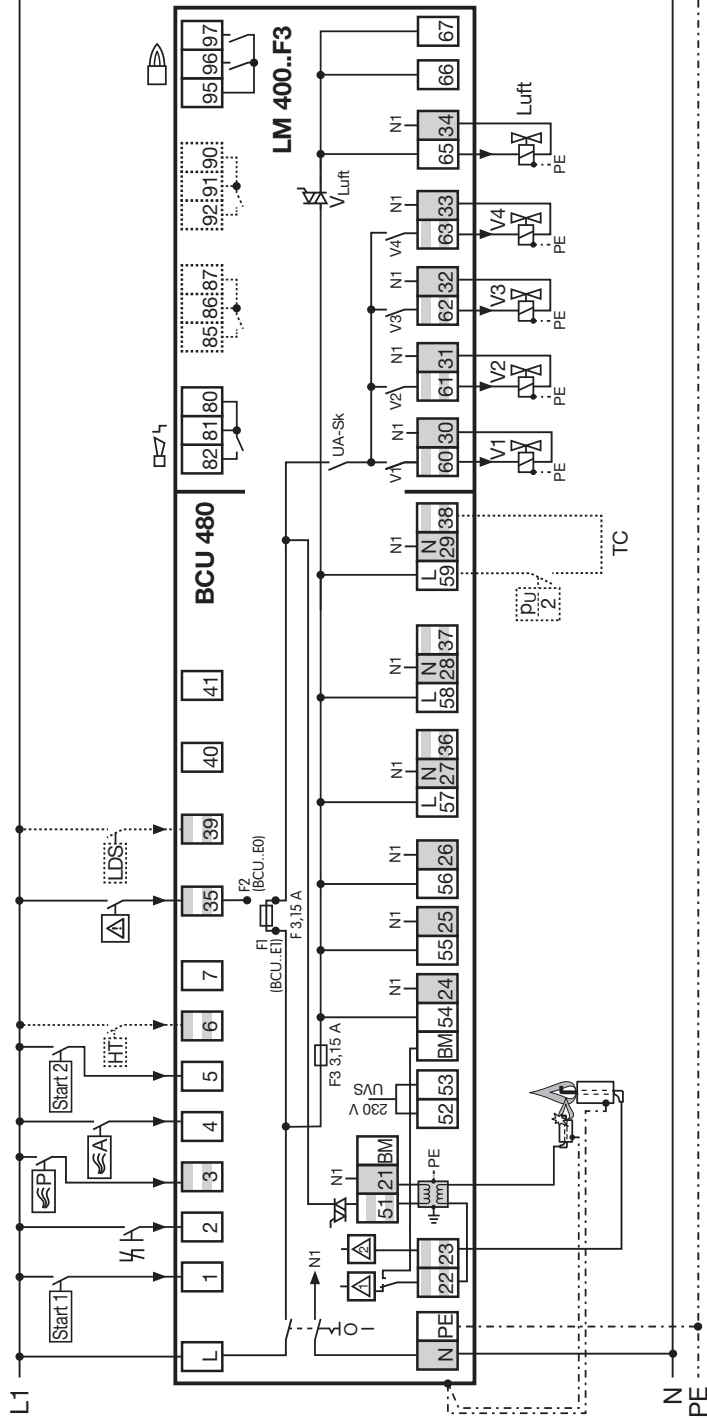

BCU..P3 with industrial plug connector


Terminal	Terminal assignment Function	BCU
2	Burner 2 operating signal	97
3	External air valve	4
4	Purge	3
5	Burner 2 start	5
6	High temperature	6
7	Safety interlocks (limits)	35
8	Burner 1 start	1
9	NO fault signalling contact	82
10	NO fault signalling contact	80
11	Supply voltage for operating signals	95
12	Burner 1 operating signal	96
14	Remote reset	2
15	Neutral conductor	N
16	Phase	L
PE	PE wire	PE

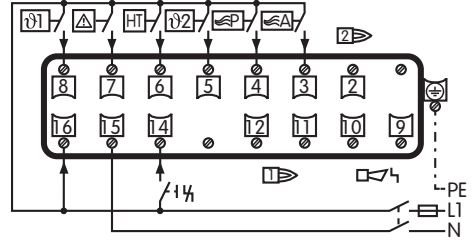

IC 40 connected to BCU/LM..F1 (staged control)

▷ Parameter I020 = 2.

▷ Set IC 40 to operating mode 11, see Actuator IC 40 operating instructions or technical information bulletin at www.docuthek.com.

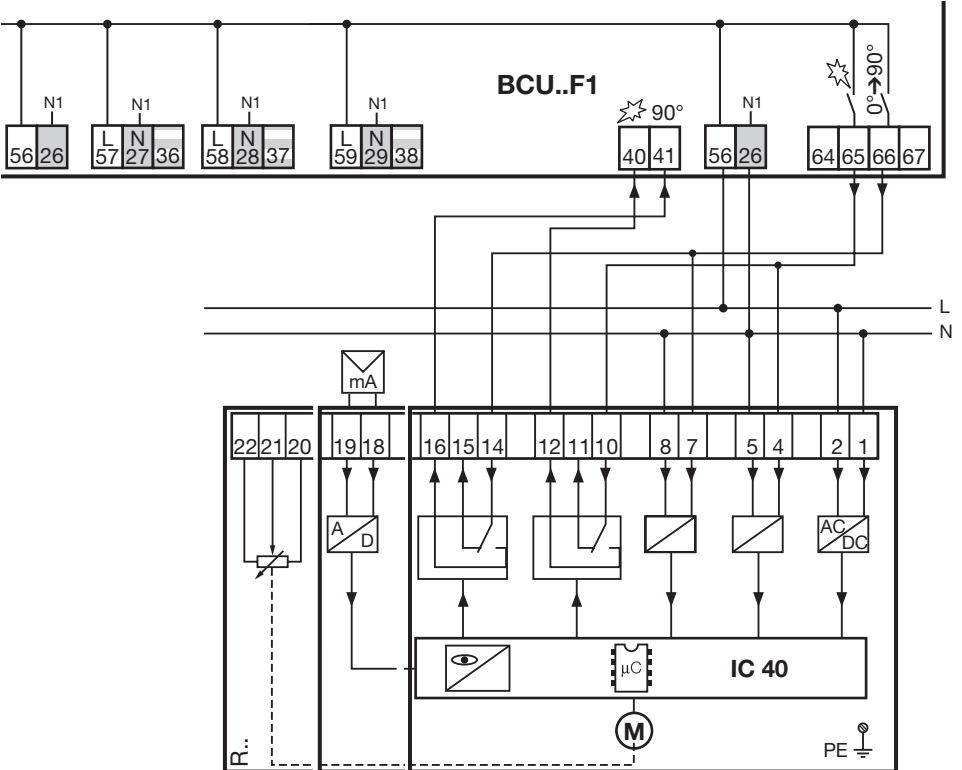

Flame control

- ▷ BCU 460, 465 = 1 flame amplifier
- ▷ BCU 480 = 2 flame amplifiers
- ▷ In the case of UV control, use Elster UV sensors for intermittent operation (UVS 5, 10) or flame detectors for continuous operation (UVC 1).


BCU 460, 465

Double-electrode operation:

- ▷ See from page 7 (Connection diagram), BCU 460/LM..F0, BCU 460/LM..F3 and BCU 465/LM..F3.

Ionization/single-electrode operation:


- ▷ Parameter I004 = 0.

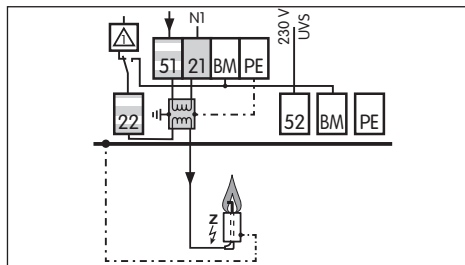

UV control:


UVS 5, 10

- ▷ Parameter A001 $\geq 5 \mu\text{A}$.
- ▷ Parameter I004 = 1.

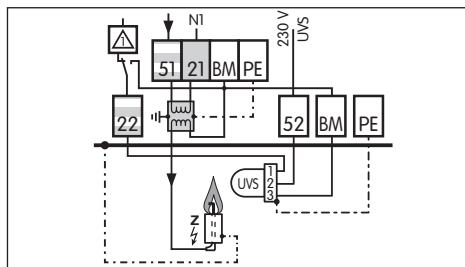

UVC 1


- ▷ Parameter I004 = 2.

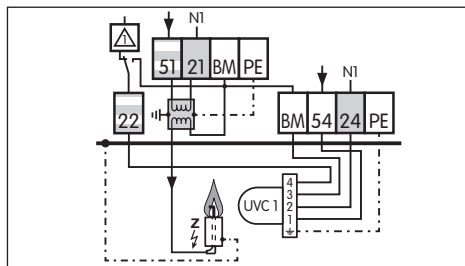

BCU 480


Pilot burner = double-electrode operation/ main burner = ionization:

- ▷ Pilot burner in double-electrode operation
- ▷ Ionization control for main burner
- ▷ Parameter I004 = 0.

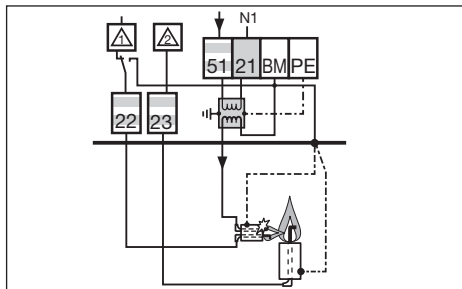


Pilot burner = single-electrode operation/ main burner = ionization:

- ▷ Pilot burner in single-electrode operation
- ▷ Ionization control for main burner
- ▷ Parameter I004 = 0.

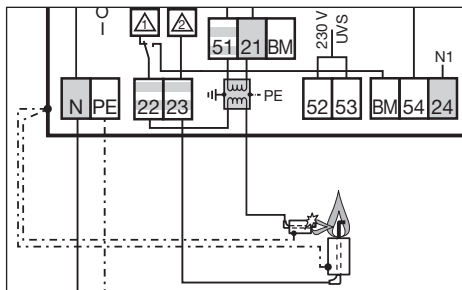


Pilot burner = single-electrode operation/ main burner = UVS:

- ▷ Parameter A001 $\geq 5 \mu\text{A}$.
- ▷ Parameter I004 = 3.

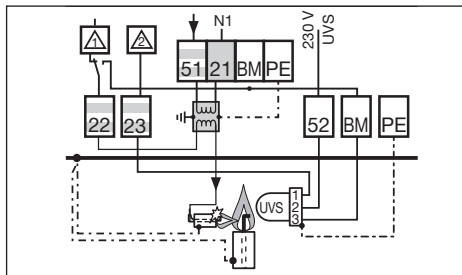


**Pilot burner = single-electrode operation/
main burner = UVC 1:**

- ▷ Parameter I004 = 4.

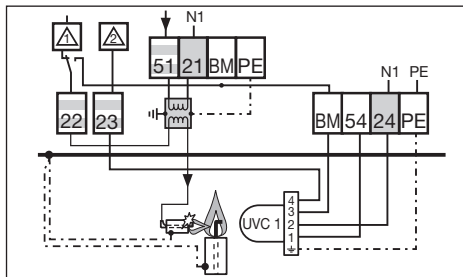


Pilot burner = UVS/main burner = ionization:

- ▷ Parameter A002 $\geq 5 \mu\text{A}$.
- ▷ Parameter I004 = 5.

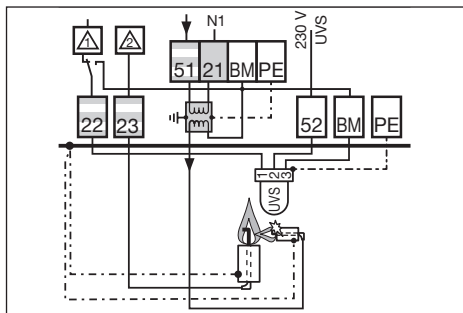


Pilot burner = UVC/main burner = UVC:

- ▷ Parameter I004 = 2.

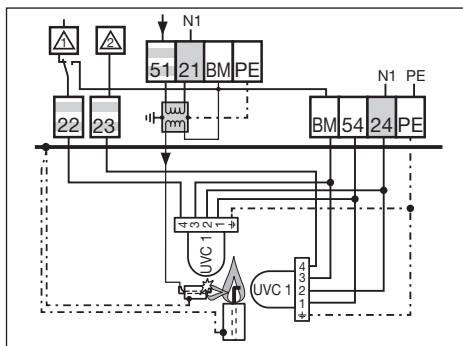


Pilot burner = UVC/main burner = ionization:

- ▷ Parameter I004 = 7.

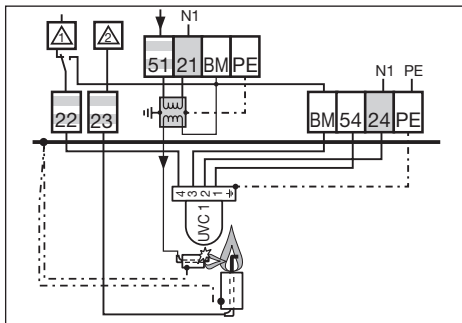

Pilot burner = UVC/main burner = UVS:

- ▷ Parameter A002 $\geq 5 \mu\text{A}$.
- ▷ Parameter I004 = 8.

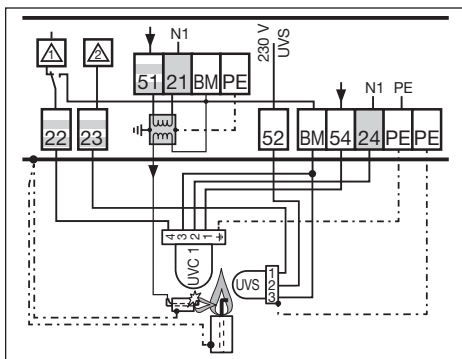


Adjustment

In certain cases, it may be necessary to change the parameters set at the factory. Using the separate software package BCSOFT and an opto-adapter, it is possible to modify parameters on the BCU, such as the safety time or the behaviour in the event of a flame failure.

1 Set the parameters using BCSOFT.

- ▷ For reasons of network security, it is not possible to access the unit via the network using BCSOFT.
- ▷ The software package and the opto-adapter are available as accessories.
- ▷ Changed parameters are saved on the integrated parameter chip card.
- ▷ The factory settings are secured with a programmable password. The default password is 1234. We recommend changing the password upon commissioning.
- ▷ Hardware parameters (e.g. type of flame control or type of air actuator) are set via interface parameters I004 to I074.
- ▷ Once parameters have been changed, a check is automatically carried out to ensure that the changes have been accepted and the display shows "UrFy".

- 2 Press the Reset/Information button on the BCU.

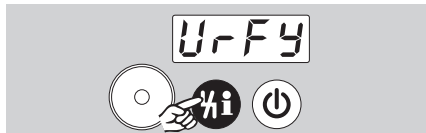

- ▷ The first parameter value that was changed is displayed.

- 3 Press the Reset/Information button again.

- ▷ The next parameter value that was changed is displayed.

- ▷ Repeat this procedure until "rdY" is displayed.

- 3 Press the Reset/Information button on the BCU to confirm the new parameter settings.



Commissioning

- ▷ During operation, the 7-segment display shows the program status:

00	Standby
H0	Delay
Rc	Approaching minimum capacity
R0	Cooling
01	Fan run-up time
R1	Pre-ventilation
Rc	Approaching maximum capacity
H1	Delay
P0	Pre-purge
P1	Pre-purge
R1	Approaching ignition capacity
tc	Valve check
02	Safety time 1 t _{SA1}
R2	Safety time 1 t _{SA1}
03	Flame proving period 1 t _{FS1}
R3	Flame proving period 1 t _{FS1}
04	Burner 1 operation
R4	Burner 1 operation
05	Burner 2 waiting time
R5	Delay
H5	Delay time during burner 2 waiting time
06	Safety time 2 t _{SA2}
R6	Safety time 2 t _{SA2}
07	Flame proving period 2 t _{FS2}
R7	Flame proving period 2 t _{FS2}
08	Burner 2 operation
R8	Burner 2 operation
H8	Delay
--	Device Off
---	Data transfer (programming mode)
...	(blinking dots) Manual mode
I XX	Low NO _x operation in program step XX

- h XX High temperature operation in program step XX

- ▷ Units with SafetyLink function (BCU with bus module BCM..S1) may only be commissioned using BCSoft. Further information can be found in Technical Information bulletin BCU 46x or BCU 480.

⚠ WARNING

Risk of explosion! Check the system for tightness before commissioning.

Do not start the BCU until the parameter settings and wiring are correct and the faultless processing of all input and output signals complies with the local standards.

- 1 Switch on the system.

- ▷ The display shows --.

- 2 Switch on the BCU by pressing the On/Off button.

- ▷ The display shows 00.

- ▷ The display blinks and indicates Exxx. A resettable fault message is signalled. Reset the BCU by pressing the Reset/Information button.

- ▷ The display blinks without indicating "E". A warning message is signalled. Once the fault has been eliminated, the display stops blinking and the BCU continues the program run.

BCU 460..F0

- 3 Apply the start-up signal to terminal 1.

- ▷ The display shows 01.

- ▷ The display shows 02. The gas valves open and the burner ignites. Safety time 1 starts to elapse.

- ▷ The display indicates 03 during flame proving period 1.

- ▷ The display shows 04. The burner is in operation.

BCU 46x..F1, BCU 46x..F3

- ▷ If the air actuator is activated externally for cooling in the start-up position, the display indicates R0.

- 3 Apply the start-up signal to terminal 1.

- ▷ The display indicates 01 or R1 if the air actuator has been activated.

- ▷ The display indicates 02 or R2 if the air actuator has been opened. The gas valves open and the burner ignites. Safety time 1 starts to elapse.

- ▷ The display indicates 03 during flame proving period 1 or R3 if the air actuator has been opened.

- ▷ The display indicates 04 or R4 if the air actuator has been opened. The burner is in operation.

BCU 480..F1/F3


- ▷ If the air actuator is activated externally for cooling in the start-up position, the display indicates R0.

- 3 Apply the start-up signal to terminal 1.


- ▷ The display indicates 01 or A1 if the air actuator has been opened.
- ▷ The display indicates 02 or A2 if the air actuator has been opened. The gas valves open, the pilot burner (burner 1) ignites and safety time 1 starts to elapse.
- ▷ The display indicates 03 during flame proving period 1 or A3 if the air actuator has been opened.
- ▷ The display indicates 04 or A4 if the air actuator has been opened. The pilot burner is in operation.
- ▷ The display indicates 05 or A5 if the air actuator has been opened. The main burner (burner 2) ignites and safety time 2 starts to elapse.
- ▷ The display indicates 07 during flame proving period 2 or A7 if the air actuator has been opened.
- ▷ The display indicates 08 or A8 if the air actuator has been opened. The main burner is in operation. The controller enable signal has been issued.

Manual mode

- ▷ For adjustment of the burner control unit or for fault-finding.
 - ▷ In Manual mode, the BCU operates independently of the status of the inputs for start-up signal (terminal 1), external air valve control (terminal 4) and remote reset (terminal 2). The function of the controller enable/emergency stop input (terminal 35) is retained.
 - ▷ Manual mode is terminated by switching off the BCU or in the event of a power failure.
 - ▷ Parameter A067 = 0: Manual mode unlimited in time.
 - ▷ Parameter A067 = 1: the BCU will terminate Manual mode 5 minutes after the last time the Reset/Information button is pressed. It switches to the start-up position/standby (display 00).
- 1** Switch on the BCU while holding the Reset/Information button. Hold the Reset/Information button until 4 dots start to flash in the display.

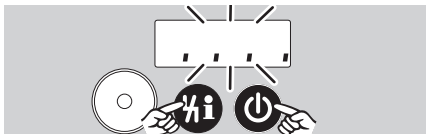

- ▷ If the Reset/Information button is pressed briefly, the current step in Manual mode is shown and 5.XXX is displayed.
- ▷ If the Reset/Information button is pressed for > 1 s, the BCU proceeds to the next program step.

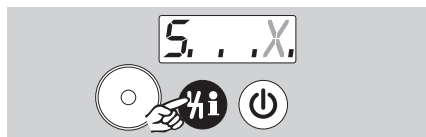

BCU 460/LM..F0

- 2** Press the Reset/Information button for 1 s.

- ▷ The display shows 5. . 2 (step 2).
- ▷ The BCU will start the first stage of the burner.
- ▷ The display runs to . 02 or . 03.
- ▷ After 3 seconds in this position, the μ A value for the flame signal XXX is displayed instead of the program status.

- 3** Press the Reset/Information button for 1 s.

- ▷ The display shows 5. . 3 (step 3).
- ▷ The BCU will start the second stage of the burner.
- ▷ The display runs to . 04.
- ▷ After 3 seconds in this position, the μ A value for the flame signal XXX is displayed instead of the program status.

BCU 46x/LM..F1/F3

- 2** Press the Reset/Information button for 1 s.

- ▷ The display shows 5. . 1 (step 1).
- ▷ The BCU will start to purge the burner.
- ▷ The display shows . P 0.

WARNING

Risk of explosion! The pre-purge time is not included in the program. Maintain state P 0 until the combustion chamber has been adequately ventilated.

- 3** Press the Reset/Information button for 1 s.

- ▷ The display shows 5. . 2 (step 2).
- ▷ The BCU will start the first stage of the burner.
- ▷ The display runs to . 02 or . 03 (an A rather than a 0 appears if the air actuator is activated).
- ▷ After 3 seconds in this position, the μ A value for the flame signal XXX is displayed instead of the program status.

- 4** Press the Reset/Information button for 1 s.

- ▷ The display shows 5. . 3 (step 3).
- ▷ The BCU will start the second stage of the burner.
- ▷ The display runs to . 04 (. A4).
- ▷ After 3 seconds in this position, the μ A value for the flame signal XXX is displayed instead of the program status.

Air actuator control:

The air actuator is activated externally (parameter A048 = 0).

- 5** Press the Reset/Information button for 1 s.

- ▷ The display shows 5. . 4 (step 4).
- ▷ The BCU will open the air actuator.
- ▷ Each time the button is pressed, the air actuator is closed or opened again.

The air actuator opens under program control (parameter A048 = 1, 2, 3, 4, 5 or 6).

- ▷ The air actuator opens under program control with valves V1, V2, V3 or when it reaches the operating position.
- 5** Press the Reset/Information button for 1 s.
- ▷ The display shows **[5..4]** (step 4).
- ▷ The BCU will start the shut-down procedure.

BCU 480

- 2** Press the Reset/Information button for 1 s.
- ▷ The display shows **[5..1]** (step 1).
- ▷ The BCU will start to purge the burner.
- ▷ The display shows **[.PQ]**.

⚠ WARNING

Risk of explosion! The pre-purge time is not included in the program. Maintain state **PQ** until the combustion chamber has been adequately ventilated.

- 3** Press the Reset/Information button for 1 s.
- ▷ The display shows **[5..2]** (step 2).
- ▷ The BCU will start the pilot burner.
- ▷ The display runs to **[.Q4]** (an **H** rather than a **Q** appears if the air actuator is activated).
- ▷ After 3 seconds in this position, the μ A value for the flame signal **[XXX]** is displayed instead of the program status.
- 4** Press the Reset/Information button for 1 s.
- ▷ The display shows **[5..3]** (step 3).
- ▷ The BCU will start the first stage of the main burner.
- ▷ The display runs to **[.QA]**.
- ▷ After 3 seconds in this position, the μ A value for the flame signal **[XXX]** is displayed instead of the program status.

Air actuator control:

The air actuator is activated externally (parameter A048 = 0).

- 5** Press the Reset/Information button for 1 s.
- ▷ The display shows **[5..4]** (step 4).
- ▷ The BCU will open the air actuator.
- ▷ The display shows **[.R4]**.
- ▷ Each time the button is pressed, the air actuator is closed or opened again.
- ▷ Press the On/Off button to switch the unit off.

The air actuator opens under program control (parameter A048 = 1, 2, 3, 4, 5 or 6).

- ▷ The air actuator opens under program control with valves V1, V2, V3, V4 or when it reaches the operating position.
- ▷ If the Reset/Information button is pressed for 1 s, the display shows **[5..4]** (step 4) and the BCU starts the shut-down procedure.

Assistance in the event of malfunction

⚠ DANGER

To avoid harm to persons and damage to the unit, please observe the following:

- Electric shocks can be fatal! Before working on possible live components, ensure the unit is disconnected from the power supply.
 - Fault-clearance must only be undertaken by authorized trained personnel!
- ▷ Faults may be cleared only using the measures described below.
 - ▷ If the BCU does not respond even though all faults have been remedied: remove the unit and return it to the manufacturer for inspection.
 - ▷ The display blinks and indicates **[E:XX]**. A resettable fault lock-out is signalled. In the event of a fault lock-out, the fault signalling contact closes, the display blinks and shows the current program step. The gas valves are disconnected from the electrical power supply.
- After a fault lock-out, the BCU must be reset manually using the button on the front panel or the remote reset input (terminal 2).
- The BCU cannot be reset by mains failure (non-volatile fault lock-out). The fault signalling contact does, however, open as soon as the mains voltage fails.
- ▷ The display blinks without indicating "E". A warning message is signalled. Once the fault has been eliminated, the display stops blinking and the BCU continues the program run.

? Faults

! Cause

• Remedy

? The 7-segment display does not light up.

! Mains voltage is not applied.

- Check the wiring, apply mains voltage (see type label).



? The display blinks and indicates **[E 01]** or **[E A1]**.

! The BCU has detected an incorrect flame signal without the burner having been ignited (extraneous signal).

- Direct the UV sensor exactly at the burner to be monitored.
- ! The UV tube in the UV sensor is defective (service life ended) and issues a continuous flame signal.
- Replace the UV tube, see UV sensor operating instructions.

- ! Flame signal through conductive ceramic insulator.
- Increase value of parameter A001 in order to adapt the switch-off threshold of the flame amplifier for burner 1.




? Start-up – no ignition spark – the display blinks and indicates E 02 or E A2.

- ! The ignition cable is too long.
- Shorten it to 1 m (max. 5 m).
- ! Gap between spark electrode and burner head is too great.
- Adjust gap to max. 2 mm.
- ! Ignition cable has no contact in the terminal boot.
- Screw the cable on firmly.
- ! Ignition cable has no contact in the ignition transformer.
- Check the connection.
- ! Ignition cable has short-circuited to ground.
- Check installation, clean the spark electrode.
- If the fault cannot be remedied by doing this, remove the unit and return it to the manufacturer for inspection.

? Start-up without flame – no gas supply – the display blinks and indicates E 02 or E A2.

- ! A gas valve does not open.
- Check the gas pressure.
- Check voltage supply to the gas valve.
- ! There is still air in the pipe, e.g. after installation work has been carried out or if the system has not been in operation for a long period.
- “Purge” the pipeline and reset the BCU.
- If the fault cannot be remedied by doing this, remove the unit and return it to the manufacturer for inspection.

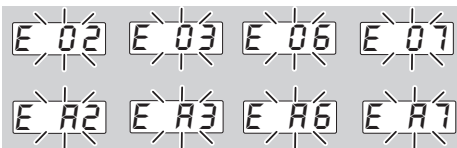

? Start-up – flame burning – nevertheless, the display blinks and indicates E 02 or E 03 on the pilot burner/burner (burner 1) or E 06 or E 07 on the main burner (burner 2).

- ! Flame failure on start-up.
- Read off the flame signal.
- ▷ If the flame signal is lower than the switch-off threshold for the flame signal from burner 1 (parameter A001) or burner 2 (parameter A002), this may be attributable to the following causes:
- ! The set value for the cut-off sensitivity is too high.

- ! Short-circuit on the flame rod as the result of soot, dirt or moisture on the insulator.
- ! Flame rod not correctly positioned at the flame edge.
- ! Terminal boot not properly connected to flame rod.
- ! Gas/air ratio incorrect.
- ! Flame not contacting burner ground as the result of excessively high gas or air pressure.
- ! Burner or BCU not (adequately) grounded.
- ! Short-circuit or discontinuity on the flame signal cable.
- ! Soiled UV sensor.
- ! UV sensor wiring is defective.
- Remedy fault.



? Operation – flame burning – burner 1 interrupted – the display blinks and indicates E 04 or E A4.

- ! Flame failure during operation.
- Read off the flame signal, see page 25 (Reading off the flame signal, fault messages and parameters).
- ▷ If the flame signal is lower than the switch-off threshold for the flame signal from burner 1 (parameter A001), this may be attributable to the following causes:
- ! The set value for the cut-off sensitivity is too high.
- ! Short-circuit on the flame rod as the result of soot, dirt or moisture on the insulator.
- ! Flame rod not correctly positioned at the flame edge.
- ! Gas/air ratio incorrect.
- ! Flame not contacting burner ground as the result of excessively high gas or air pressure.
- ! Burner or BCU not (adequately) grounded.
- ! Short-circuit or discontinuity on the flame signal cable.
- ! Soiled UV sensor.
- Remedy fault.



? The display blinks and indicates E 05 or E A5.

- ! The BCU has detected an incorrect flame signal without burner 2 (main burner) having been ignited (extraneous signal).
- Direct the UV sensor exactly at burner 2 to be monitored.
- ! The UV tube in the UV sensor is defective (service life ended) and issues a continuous flame signal.

- Replace the UV tube, see UV sensor operating instructions.
- ! Flame signal through conductive ceramic insulation.
- Increase value of parameter A002 in order to adapt the switch-off threshold of the flame amplifier for burner 2.



? Operation – flame burning – burner 2 interrupted – the display blinks and indicates E 08 or E R8.

- ! Flame failure during operation or during delayed controller enable.
- Read off the flame signal, see page 25 (Reading off the flame signal, fault messages and parameters).
- ▷ If the flame signal is lower than the switch-off threshold for the flame signal from burner 2 (parameter A002), this may be attributable to the following causes:
 - ! The set value for the cut-off sensitivity is too high.
 - ! Short-circuit on the flame rod as the result of soot, dirt or moisture on the insulator.
 - ! Flame rod not correctly positioned at the flame edge.
 - ! Gas/air ratio incorrect.
 - ! Flame not contacting burner ground as the result of excessively high gas or air pressure.
 - ! Burner or BCU not (adequately) grounded.
 - ! Short-circuit or discontinuity on the flame signal cable.
 - ! Soiled UV sensor.
 - Remedy fault.



? The display blinks and indicates E 10.

- ! Actuation of the remote reset input is faulty.
- ! Too many remote resets. More than 5 resets have been conducted within the last 15 minutes, either automatically or manually.
- ! Consecutive fault caused by a previous fault whose actual cause has not been remedied.
- Pay attention to previous fault messages.
- Remedy cause.
- ▷ The cause will not be remedied by performing a reset every time a fault lock-out occurs.
- Check whether remote reset complies with standards (EN 746 allows resetting only under supervision) and correct if necessary.
- ▷ The BCU may only be reset manually under supervision.
- Press the Reset/Information button on the BCU.



? The display blinks and indicates E 11.

- ! Too many restarts for burner 1. More than 5 restarts initiated within the last 15 minutes.
- Check burner settings.
- ▷ Ensure that the flame signal is above the switch-off threshold during operation.
- Check the settings for capacity control during operation.
- Press the Reset/Information button on the BCU.



? The display blinks and indicates E 12.

- ! Too many restarts for burner 2. More than 5 restarts initiated within the last 15 minutes.
- Check burner settings.
- ▷ Ensure that the flame signal is above the switch-off threshold during operation.
- Check the settings for capacity control during operation.
- Press the Reset/Information button on the BCU.



? The display blinks and indicates E 21.

- ! Inputs 40 and 41 are activated simultaneously.
- Check input 41.
- ▷ Input 41 may only be activated if the valve is open.
- Check input 40.
- ▷ Input 40 may only be activated if the valve is in the position for ignition capacity.



? The display blinks and indicates E 22.

- ! The butterfly valve position is not constantly signalled back to the BCU.
- Check the wiring and ensure that the position for max. capacity/ignition capacity of the butterfly valve is constantly signalled back via terminals 41 and 42.



? The display blinks and indicates E 30, E 31.

- ! Abnormal data change in the parameters set for the BCU.
- Reset the parameters to their original values using the BCSof software.

- Establish the cause of the fault to avoid repeat faults.
- Ensure that the cables have been installed properly – see page 5 (Cable selection and installation).
- If the measures described above do not help, remove the unit and return it to the manufacturer for inspection.



? The display blinks and indicates E 32.

- ! Supply voltage too low or too high.
- Operate the BCU in the specified mains voltage range (mains voltage +10/-15%, 50/60 Hz).
- ! An internal device error occurred.
- Remove the unit and return it to the manufacturer for inspection.



? The display blinks and indicates E 33.

- ! Faulty parameterization.
- Check parameter settings using BCSof.
- ! An internal device error occurred.
- Remove the unit and return it to the manufacturer for inspection.



? The display blinks and indicates E 34.

- ! Faulty actuation of the air valve.
- ! Voltage is applied to the air valve outputs (65 – 67).
- Check the wiring and ensure that the voltage outputs and inputs have the same polarity and are not reversed.
- ! Fuse F3 defective.
- Replace fuse F3.
- ! An internal device error occurred.
- Replace the power module.
- Remove the unit and return it to the manufacturer for inspection.



? The display blinks and indicates E 35.

- ! Bus module and control unit are incompatible.
- Check the bus system and PLC for compatibility.
- ! Bus module does not support the selected function.
- Check the setting of parameter A075.



? The display blinks and indicates E 36.

- ! Voltage is applied to the device outputs.
- Check the wiring and ensure that the voltage outputs and inputs have the same polarity and are not reversed.
- ! Fuses defective.
- Replace the fuses.
- ! An internal device error occurred.
- Replace the power module.
- Remove the unit and return it to the manufacturer for inspection.



? The display blinks and indicates E 40.

- ! The gas solenoid valve V1 is leaking.
- Check the gas solenoid valve V1.
- ! The gas pressure switch DGp_u/2 for the tightness test has been set incorrectly.
- Check the inlet pressure.
- Set DGp_u/2 to the correct inlet pressure.
- Check the wiring.
- ! The test pressure between V1 and V2 has not decreased.
- Check the installation.
- ! The test period is too long.
- Check parameter A056 (Measurement time for V_{p1}) and change using BCSof.
- If the fault cannot be remedied by doing this, remove the unit and return it to the manufacturer for inspection.



? The display blinks and indicates E 41.

- ! The downstream gas solenoid valve (V2, V3 or V4) is leaking.
- Check the downstream solenoid valve.
- ! The gas pressure switch DGp_u/2 for the tightness test has been set incorrectly.
- Check the inlet pressure.
- Set DGp_u/2 to the correct pressure.
- Check the wiring.
- ! The test period is too long.
- Check parameter A056 (Measurement time for V_{p1}) and change using BCSof.
- If the fault cannot be remedied by doing this, remove the unit and return it to the manufacturer for inspection.



- ? The display blinks and indicates E 44.**
- ! Faulty pressure switch signal.
 - Check the wiring and setting of the pressure switch/gas valve.



- ? The display blinks and indicates E 51.**
- ! Interruption of signal at the "Safety interlock/Controller enable/Emergency stop" input (terminal 35).
 - Check voltage supply to terminal 35.



- ? The display blinks and indicates E 52.**
- ! The BCU is permanently reset by remote reset.
 - Check remote reset activation (default terminal = 2 or bus).
 - To reset the unit, only apply voltage to the remote reset terminal for approx. 1 second.



- ? The display blinks and indicates E 53.**
- ! The time between two starts is less than the min. time (timing cycle).
 - Comply with max. number of start-ups (n) per minute:

t _{SA} [s]	Device type		Max. number [n/min.]
3	Ignition transformer ID number		6
5	BCU..Q1	BCU..W1	6
10	34340581	34340585	3
3	BCU..Q2	BCU..W2	3
5	34340582	34340586	2
10			1
3	BCU..Q3	BCU..W3	6
5	34340583	34340587	4
10			2
3	BCU..Q8	BCU..W8	4
5	34340584	34340588	3
10			2



- ? The display blinks and indicates E 54.**
- ! Faulty feedback signal of the control element position for ignition capacity.
 - Check wiring from central actuator to BCU (terminal 39).
 - Check whether parameter I072 = 13 (LDS ignition position check) and A089 = 2.




- ? The display blinks and indicates E 57.**
- ! Faulty actuation of the input for high temperature operation. The BCU is prompted to go into menox mode, even though there is no signal for high temperature operation (> 750°C).
 - Check the wiring.



- ? The display blinks and indicates E 80.**
- ! Burner 1 flame amplifier is defective.
 - Remove the unit and return it to the manufacturer for inspection.



- ? The display blinks and indicates E 85.**
- ! Burner 2 flame amplifier is defective.
 - Remove the unit and return it to the manufacturer for inspection.

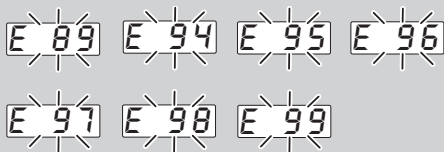

- ? The display indicates E 89, E 94, E 95, E 96, E 97, E 98 or E 99.**
- ! System fault – the BCU has performed a safety shut-down. The cause may be a unit defect or abnormal EMC influence.
 - Ensure that the ignition cable has been installed properly – see page 5 (Cable selection and installation).
 - Ensure that the EMC regulations for the system are satisfied – particularly for systems with frequency converters – see page 5 (Cable selection and installation).
 - Reset the unit.
 - Disconnect the burner control unit from the mains supply and then switch it on again.
 - Check mains voltage and frequency.
 - If the measures described above do not help, the unit has probably suffered a hardware defect – remove the unit and return it to the manufacturer for inspection.



? The display blinks and indicates E 91.

- ! Flame amplifier is defective.
- Check the wiring.
- ! Fuses defective.
- Replace the fuses.
- If the measure described above does not help, the unit has probably suffered a hardware defect – remove the unit and return it to the manufacturer for inspection.



? The display blinks and indicates E 92.

- ! DC voltage is supplied to the inputs.
- ! The signal inputs and L are supplied with different phases of a three-phase current system.
- Check the wiring and ensure that the device and the inputs are supplied with the same phase.



? The display blinks and indicates E 94.

- ! The inputs are supplied with different phases of a three-phase current system.
- Check the wiring and ensure that the device and the inputs are supplied with the same phase.



? The display blinks and indicates E 97.

- ! No PCC.
- Insert compatible PCC.
- ! Contact problems on the power module.
- Remedy contact problems.
- ! Power module is defective.
- Replace power module.
- If the measures described above do not help, the unit has probably suffered a hardware defect – remove the unit and return it to the manufacturer for inspection.



? The display blinks and indicates E R C.

- ! No “Minimum capacity reached” signal from actuator.
- Check the butterfly valve and the function of the limit switches in the actuator.
- Check the wiring.
- Check the actuator.

- If the fault cannot be remedied by doing this, remove the unit and return it to the manufacturer for inspection.



? The display blinks and indicates E R O.

- ! No “Maximum capacity reached” signal from actuator.
- Check the butterfly valve and the function of the limit switches in the actuator.
- Check the wiring.
- Check the actuator.
- If the fault cannot be remedied by doing this, remove the unit and return it to the manufacturer for inspection.



? The display blinks and indicates E R I.

- ! No “Ignition capacity reached” signal from actuator.
- Check the butterfly valve and the function of the limit switches in the actuator.
- Check the wiring.
- Check the actuator.
- If the fault cannot be remedied by doing this, remove the unit and return it to the manufacturer for inspection.



? The display blinks and indicates E b E.

- ! Internal communication with bus module has suffered a fault.
- Connected control elements must be equipped with protective circuits in accordance with the manufacturer's instructions.
- ▷ This prevents high voltage peaks which can cause malfunctioning of the BCU.
- Use interference-suppressed terminal boots (1 kΩ).
- If the fault cannot be remedied by doing this, remove the unit and return it to the manufacturer for inspection.
- ! Bus module is defective.
- Replace the bus module.



? The display blinks and indicates E b O.

- ! Faulty connection to master.
- Check the connection.

- Check whether the slave is configured in the master.



? The display blinks and indicates E b 1.

- ! Incorrect K-SafetyLink address.
- Check that the set address matches the address configured for K-SafetyLink.
- Only use addresses in the range of 0x001 to 0xFEFF.



? The display blinks and indicates E b 2.

- ! Plausibility check failed, K-SafetyLink configuration invalid.
- Check SafetyLink configuration in BCSofT and transfer to the device again.



? The display blinks and indicates E b 4.

- ! K-SafetyLink awaiting configuration.
- Create a SafetyLink project with BCSofT and transfer the configuration to the device.



? The display blinks and indicates E b 5.

- ! Slave configuration check not executed or failed.
- Start and complete the verification of the configuration in the SafetyLink master assigned to the slave using BCSofT.



? The display blinks and indicates E b 7.

- ! Incompatible or defective bus module.
- Replace bus module with a functional device (for K-SafetyLink).



? The display blinks and indicates E b 8.

- ! The unit is accessed by two or more devices with the same address.
- Check the configuration in BCSofT.
- ▷ Each device must have a unique address.
- Remove any device with an incorrect address configuration from the network or reconfigure it.

- Check the correct assignment of the master and slave devices using the verification procedure.



? The display blinks and indicates E b 9.

- ! The unit is accessed by one or more devices with unknown addresses.
- Check the configuration in BCSofT.
- ▷ Each slave may only be assigned to one master.
- Remove any device with an incorrect address configuration from the network or reconfigure it.
- Check the correct assignment of the master and slave devices using the verification procedure.



? The display blinks and indicates E c c.

- ! Incorrect or defective parameter chip card (PCC).
- Only the intended parameter chip card is to be used.
- Upload the current parameter settings again.
- Replace defective parameter chip card.



? The display blinks and indicates E c 1.

- ! No input signal from the valve proof of closure switch (POC) during standby.
- Check the wiring.
- ▷ Mains voltage must be supplied to the BCU (terminals 36, 37 and 38) if the valve is closed and no voltage is to be applied if the valve is open.
- Check that the proof of closure switch and valve function perfectly, replace defective valves.



? The display blinks and indicates E c 8.

- ! The BCU is receiving no information as to whether the POC switch contact is still open.
- Check the wiring.
- ▷ During start-up, mains voltage must be supplied to the BCU (terminals 36, 37 and 38) if the valve is closed and no voltage is to be applied if the valve is open.
- Check that the proof of closure switch and valve function perfectly, replace defective valves.



? The display blinks and indicates E d0.

- ! The “no flow” state check of the air pressure switch has failed.
- Check the function of the air pressure switch.
- ▷ Before the fan is switched on, there must be no high signal at the input for air monitoring (terminals 36/37) when air monitoring is activated.




? The display blinks and indicates E d1.

- ! The operating check of the air pressure switch has failed. The air monitor has not switched after activation of the air supply.
- Check the air monitor wiring.
- Check the air pressure switch setpoint.
- Check the function of the fan or air supply.



? The display blinks and indicates E dP.

- ! The input signal (terminal 37) from the air pressure switch has dropped out during pre-purge.
- Check the air supply during the purging process.
- Check the electrical wiring of the air pressure switch.
- Check voltage supply to terminal 37.
- Check the air pressure switch setpoint.

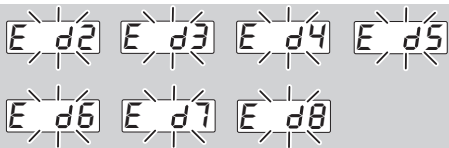

? The display blinks and indicates E d2, E d3, E d4, E d5, E d6, E d7 or E d8.

- ! The input signal from the air pressure switch has dropped out during start-up/operation at program step X (02 to 08).
- ! Failure of the air supply at program step X.
- Check the air supply.
- Check the air pressure switch setpoint.



? The display blinks and indicates n0.

- ! No connection established between BCU and PLC.
- Check the wiring.

- Check the PLC program to ensure that the network name and IP configuration of the BCU are valid.
- Switch on the PLC.

Or

? A bus fault is indicated on the automation system.

- ! The PROFIBUS DP data traffic has suffered a fault.
- ! Bus cable interrupted.
- Check cable.
- ! Incoming and outgoing bus cables confused in the plug.
- Check the wiring.
- ! A and B cables confused.
- Check the wiring.
- ! Terminal resistors connected incorrectly.
- Switch on the terminal resistors on the first and last subscriber in the segment and switch them off for all other subscribers.
- ! Incorrect PROFIBUS address set.
- Correct the address setting – switch the unit off and then on again to save the address.
- ! Bus cables too long.
- Reduce cable length or baud rate – see page 14 (Commissioning).
- ▷ If the transfer rate is reduced, remember that this will increase the signal running times to and from the individual units.
- ! Poor shielding.
- Check whether the shield is connected to the shield clips in the PROFIBUS DP plugs in full and over a wide area.
- ! Poor equipotential bond.
- Check whether the PROFIBUS DP shield is connected at all points to the same ground potential via the grounding system of the units.
- If necessary, an equipotential bonding cable must be laid.
- ▷ If faults occur sporadically in the PROFIBUS DP system, and are only indicated briefly in the bus master, the following points in particular should be checked:
 - Terminal resistors,
 - Shielding,
 - Cable lengths/routes,
 - Equipotential bond,
 - Use of interference-suppressed spark electrode terminal boots (1 kΩ).
- ▷ For information on planning and the structure of a PROFINET network and the components to be used (e.g. cables, lines and switches), see www.profibus.com or the instructions for the automation system.



- ? The display blinks and indicates n1.**
- ▷ Fault occurs on devices with fieldbus communication with address check (A080 = 1) only.
 - !** An invalid or incorrect address has been set on the bus module.
 - Assign the correct address (001 to FEF) to the bus module.



- ? The display blinks and indicates n2.**
- !** The bus module has received an incorrect configuration from the PLC.
 - Check whether the correct GSD file was imported.



- ? The display blinks and indicates n3.**
- ▷ Fault occurs on devices with fieldbus communication with address check (A080 = 1) only.
 - !** The BCU has been assigned an invalid network name or has not been assigned a network name in the PLC.
 - Assign a network name corresponding to the default network name (bcu-460-xxx) or use the default name as a suffix of an individually assigned name in the following form: "individual-partofnamebcu-460-xxx".
 - ▷ "xxx" stands for the address set on the device (e.g. 4A5).




- ? The display blinks and indicates n4.**
- !** PLC in STOP position.
 - Check whether the PLC can be started.



- ? The display blinks and indicates OT.**
- !** The ambient temperature is too high for the BCU (excessive temperature).
 - ▷ The display disappears as soon as the temperature has dropped to the specified setpoint.



- ? The display blinks and indicates UT.**
- !** The ambient temperature is too low for the BCU (insufficient temperature).
 - ▷ The display disappears as soon as the temperature has risen to the specified setpoint again.

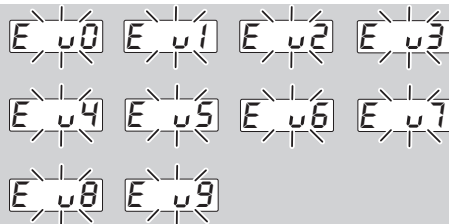

- ? The display blinks and indicates E u0, E u1, E u2, E u3, E u4, E u5, E u6, E u7, E u8 or E u9.**
- !** The signal for monitoring the min. gas pressure (terminals 36, 37 and 38) has dropped out at program step X (00 to 09).
 - Check the wiring.
 - Check the gas pressure.

Replacing the fuse


- ▷ The device fuses F1, F2 and F3 can be removed for inspection.
- ▷ The fuses are located under the power module.

! CAUTION


BCU..E0 and BCU..E1 do not have the same power supply connection. Always replace fuse F1 or F2 such that the required power supply is ensured.

- ▷ **F1 = BCU..E1:** power supply via L1.
- ▷ **F2 = BCU..E0:** power supply via safety interlocks.

- Disconnect the system/BCU from the electrical power supply.
- Open the BCU.
- Remove the power module.

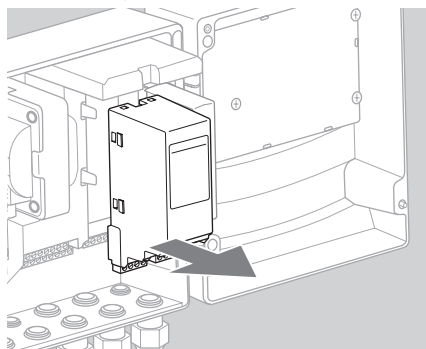

- Remove fuse F1, F2 or F3 and check for correct functioning.

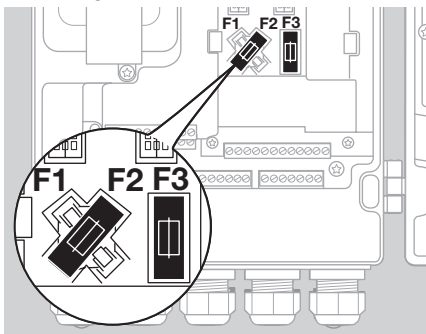

- When replacing the fuse, use only the approved fuse type:
F1, F2, F3: T 3.15A H,
pursuant to IEC 60127-2/5.

Reading off the flame signal, fault messages and parameters

- If the unit is switched on, information about the flame signal intensity, the last 10 event messages (e.g. Power ON, error E002) and the parameter values can be read off by repeatedly pressing the Reset/Information button.

Display	Information
<i>F1</i>	Flame signal intensity:
<i>F2*</i>	Burner 1
<i>H0</i>	Last event message
to	to
<i>H9</i>	tenth to last event message
<i>001</i>	Parameter 001
to	to
<i>999</i>	parameter 999

* Only on BCU 480

- Press the Reset/Information button for approx. 2 s until the display indicates **F1**.
- Release the button. The display indicates the flame signal intensity in μA .
- Press the Reset/Information button again for 2 s to go to the next item of information (event message, parameter value).
- Each time the button is released, the corresponding event message or parameter value is displayed.
- To go to one of the last event messages or to a parameter more quickly, hold the Reset/Information button pressed down for longer (≥ 2 s).
- If the button is pressed briefly, the display indicates what parameter number is currently being displayed.
- The normal program status is displayed again approx. 60 seconds after the last time the button is pressed.
- For the parameters and the corresponding values, see Technical Information bulletins BCU 46x and BCU 480.

Parameters and values

Application parameters

Parameter No.	Parameter name Parameter value
A001	Switch-off threshold 1 2 - 20 = μ A
A002	Switch-off threshold 2 2 - 20 = μ A
A003	Flame simulation check 0 = In standby 1 = Upon start-up
A005	High temperature operation 0 = Off 2 = Burner 1 UVS Burner 2 UVS 3 = Continuous operation 5 = Burner 1 UVS Burner 2 ionization
A007	Burner 1 start-up attempts 1 = 1 start-up attempt 2 = 2 start-up attempts 3 = 3 start-up attempts
A008	Burner 2 start-up attempts 1 = 1 start-up attempt 2 = 2 start-up attempts 3 = 3 start-up attempts
A009	Restart 0 = Off 1 = Burner 1 2 = Burner 2 3 = Burner 1 and burner 2 (pilot and main burners) 4 = Burner 1 max. 5 x in 15 min. 5 = Burner 2 max. 5 x in 15 min. 6 = Burner 1 & 2 max. 5 x in 15 min.
A016	Low air pressure protection delay 0 = Off 1 = On
A019	Safety time operation 0; 1; 2; 3; 4 = Time in seconds
A028	Pre-ventilation/flameless 0 - 250 = Time in seconds
A029	Cooling priority 0 = Start-up overrides cooling 1 = Cooling overrides start-up
A030	Staged cooling 0 = Start-up overrides cooling 1 = Stage 2 via signal at terminal 5 2 = After delay time
A031	Staged cooling delay 0 - 6000 = Time in seconds
A034	Pre-purge time t_{pv} 0 - 6000 = Time in seconds
A036	Pre-ventilation 0 - 250 = Time in seconds
A039	Over-run time 0 - 60 = Time in seconds
A041	Running time selection 0 = Off; position check 1 = On; for min./max. capacity 2 = On; for maximum capacity 3 = On; for minimum capacity
A042	Running time 0 - 250 = Time in seconds

Parameter No.	Parameter name Parameter value
A043	Over-run 0 = Off 1 = Post-ventilation 2 = Low fire; actuator feedback 3 = Low fire; time-bound
A044	Controller enable signal delay time t_{RF} 0 - 250 = Time in seconds
A048	Air actuator control 0 = Opens on external activation 1 = Opens with gas stage 1 2 = Opens with gas stage 2 4 = Opens with V4 burner 1 6 = Opens with gas stage 3
A049	Air actuator can be activated externally on start-up 0 = Cannot be activated 1 = Can be activated externally
A050	Air actuator in the event of fault 0 = Cannot be activated 1 = Can be activated externally
A051	Valve proving system 0 = Off 1 = Tightness test before start-up 2 = Tightness test after shut-down 3 = Tightness test before start-up and after shut-down
A052	Relief valve (VPS) 0 = V0 1 = V1 2 = V2 3 = V3 4 = V4 5 = V5
A056	Measurement time for V_{p1} 0 - 3600 = Time in seconds
A059	Valve opening time 1 t_{L1} 2 - 25 = Time in seconds
A060	POC test period 0 - 250 = Time in seconds
A061	Minimum operating time t_B 0 - 6000 = Time in seconds
A062	Minimum pause time t_{BP} 0 - 3600 = Time in seconds
A064	Flameless operation 0 = Upon next burner start 1 = Immediate burner start 2 = Immediate switchover
A067	Operating time in Manual mode 0 = Unlimited 1 = 5 minutes
A074	Combustion mode 0 = Flame mode 1 = Flameless/menox® 2 = HT without ignition 3 = HT without burner 1 start

Parameter No.	Parameter name Parameter value
R075	Air actuator (bus) 0 = Off 1 = MAX to MIN 2 = MAX to LOW FIRE 3 = MAX to IGNITION 4 = MAX to MIN; red. purge flow 5 = MAX to IGN; red. purge flow
	Function of V5 0 = Off 1 = Flame mode 2 = Flameless operation 3 = Operation
	Auxiliary gas function 0 = Off 1 = Flame mode 2 = Flameless operation 3 = Operation
	Burner application 0 = Burner 1 1 = Burner 1 with pilot gas 2 = Burner 1 & burner 2 3 = Br. 1 & Br. 2 with pilot gas 4 = Two-stage burner 1 5 = Br. 1 & two-stage br. 2 13 = Flameless 1/0 with 2 gas paths
	Gas pilot 0 = With shut-down 1 = In continuous operation 2 = With shut-down & restart
R080	Fieldbus communication 0 = Off 1 = With address check 2 = No address check
	K-SafetyLink 0 = Off 1 = On
R085	Safety interlocks (bus) 0 = Off 1 = Via FS bus 2 = Via terminal 3 = Via NFS bus 4 = Via FS bus or terminal 5 = Via FS bus and terminal
	Purge (bus) 0 = Off 1 = Via FS bus 2 = Via terminal 3 = Via NFS bus 4 = Via NFS, FS bus or terminal 5 = Via NFS, FS bus and terminal
	High temperature operation (bus) 0 = Off 1 = Via FS bus 2 = Via terminal 3 = Via NFS bus 4 = Via FS bus or terminal 5 = Via FS bus and terminal

Parameter No.	Parameter name Parameter value
R089	LDS (bus) 0 = Off 1 = Via FS bus 2 = Via terminal 3 = Via NFS bus 4 = Via FS bus or terminal 5 = Via FS bus and terminal
	Pre-ignition time 0 - 5 = Time in seconds
	Safety time 1 t_{SA1} 2 - 15 = Time in seconds
	Flame proving period 1 t_{FS1} 0 - 25 = Time in seconds
	Safety time 2 t_{SA2} 2 - 10 = Time in seconds
R096	Flame proving period 2 t_{FS2} 0 - 25 = Time in seconds
	Function of sensor 1 0 = No function 1 = APS Purge 4 = APS Stage 2 5 = APS Purge & Stage 2 6 = APS Stage 1 & Stage 2 7 = APS Purge & Stage1 & Stage2 8 = APS Flameless 9 = APS Purge & Flameless 12 = APS Stage 2 & Flameless 13 = APS Purge&Stage2&Flameless 14 = APS Stage 1&2 & Flameless 15 = APS Purge & Stage1&2 & Flameless 34 = APS External High 35 = APS External High & Purge 40 = POC V1 49 = POC V2 50 = POC V3 51 = POC V4 52 = POC V5 53 = TC 54 = GPS Flame mode 55 = GPS Flameless operation 56 = GPS Operation
	Function of sensor 2 ▷ See parameter R101 for parameter values
	Function of sensor 3 ▷ See parameter R101 for parameter values

Interface parameters

▷ Interface parameters I040 to I099 are set at the factory and normally do not need to be adjusted.

!


CAUTION

Changing the default settings of the interface parameters will change the functions of the inputs at terminals 1 to 41 and terminals 85 to 90, see page 7 (Connection diagram).


Parameter No.	Parameter name Parameter value
I004	Flame control
	0 = Ionization
	1 = UVS
	2 = UVC
	3 = Ionization 1 and UVS 2
	4 = Ionization 1 and UVC 2
	5 = UVS 1 and ionization 2
	6 = UVC 1 and UVC 2
	7 = UVC 1 and ionization 2
I020	8 = UVC 1 and UVS 2
	Air actuator
	1 = IC 20
	2 = IC 40
	3 = RBW
I040	4 = Frequency converter
	5 = Air valve
	Function of terminal 64
	0 = Off
	1 = Controller enable
I050	2 = V5
	3 = Bus output 1
	Contact 80, 81/82 function
	0 = Off
	1 = Ready signal
	2 = Air signal
	3 = Purge signal
	4 = Cooling air valve
	5 = Flue gas valve
I051	6 = Fault signal
	7 = Burner 1 operating signal
	8 = Burner 2 operating signal
	Contact 90, 91/92 function
	▷ See parameter I050 for parameter values
I052	Function of contact 95/96
I053	▷ See parameter I050 for parameter values
I054	Function of contact 95/97
I055	▷ See parameter I050 for parameter values
I056	Contact 85/86, 87 function
I057	▷ See parameter I050 for parameter values

Parameter No.	Parameter name Parameter value
I061	Function of input 1
	0 = Off
	1 = Sensor 1
	2 = Sensor 2
	3 = Sensor 3
	4 = Safety interlocks
	5 = Air
	6 = Cooling air
	7 = Air actuator R1
	8 = Air actuator R2
	9 = Start 1
	10 = Start 2
	11 = Reset
	12 = Purge
	13 = LDS start-up conditions
	14 = High temperature operation
	15 = Flame mode
	16 = Flameless operation
	17 = menox
I062	19 = Auxiliary gas
	Function of input 2
I063	▷ See parameter I061 for parameter values
I064	Function of input 3
I065	▷ See parameter I061 for parameter values
I066	Function of input 4
I067	▷ See parameter I061 for parameter values
I068	Function of input 5
I069	▷ See parameter I061 for parameter values
I070	Function of input 6
I071	▷ See parameter I061 for parameter values
I072	Function of input 7
I073	▷ See parameter I061 for parameter values
I074	Function of input 35
I075	▷ See parameter I061 for parameter values
I076	Function of input 36
I077	▷ See parameter I061 for parameter values
I078	Function of input 37
I079	▷ See parameter I061 for parameter values
I080	Function of input 38
I081	▷ See parameter I061 for parameter values
I082	Function of input 39
I083	▷ See parameter I061 for parameter values
I084	Function of input 40
I085	▷ See parameter I061 for parameter values
I086	Function of input 41
I087	▷ See parameter I061 for parameter values


Legend


 Ready for operation

 Safety interlocks (limits)

 High temperature operation


 Gas valve

 Air valve


 Burner


 Purge


 Controlled air flow

 Burner operating signal


 Start-up signal (BCU)

 Pressure switch for tightness control (TC)

 Pressure switch for maximum pressure

 Pressure switch for minimum pressure

 Differential pressure switch

 Input signal
depending on parameter xx

 Control element with butterfly valve

TC Tightness control

$p_U/2$ Half of the inlet pressure

p_d Outlet pressure

 Valve with proof of closure switch

 Input/Output, safety circuit

 Optional input

 Approaching/checking ignition position

$0^\circ \rightarrow 90^\circ$ Approaching max. capacity

90° Checking position for max. capacity

I_N Current consumption of sensor/contact

Technical data

WARNING

Information pursuant to REACH Regulation No. 1907/2006, Article 33.

The device contains substances of very high concern which are listed in the Candidate List of the European REACH Regulation No. 1907/2006.

Ambient conditions

Avoid direct sunlight or radiation from red-hot surfaces on the unit.

Avoid corrosive influences, e.g. salty ambient air or SO_2 .

The unit may only be stored/installed in enclosed rooms/buildings that are not accessible to the public.

This unit is not suitable for cleaning with a high-pressure cleaner and/or cleaning products.

Ambient temperature:

-20 to +70°C (-4 to +158°F),

no condensation permitted.

Storage temperature: -20 to +70°C (-4 to +158°F).

Transport temperature = ambient temperature.

Enclosure: IP 65 pursuant to IEC 529.

Safety class: 1.

Pollution degree: internal environment: 2,

external environment: 4.

Permitted operating altitude: < 2000 m AMSL.

Mechanical data

Weight: 5 kg.

Dimensions (W × H × D): 200 × 230 × 135 mm.

Connections:

Screw terminals:

tightening torque: 0.5 to 0.6 Nm,
nominal cross-section 2.5 mm²,
wire cross-section (rigid) min. 0.2 mm²,
wire cross-section (rigid) max. 2.5 mm²,
wire cross-section AWG/kcmil min. 24,
wire cross-section AWG/kcmil max. 12.

Spring force terminals:

nominal cross-section 2 × 1.5 mm²,
wire cross-section min. 0.2 mm²,
wire cross-section AWG min. 24,
wire cross-section AWG max. 16,
wire cross-section max. 1.5 mm².

Electrical data

Mains voltage:

BCU..Q: 120 V AC, -15/+10%, 50/60 Hz, ±5%,

BCU..W: 230 V AC, -15/+10%, 50/60 Hz, ± 5%.

Power consumption: 10 VA,

for grounded and ungrounded mains.

Flame control:

with UV sensor or flame rod.

For intermittent or continuous operation.

Flame signal current:

Ionization control: 1–25 µA,

UV control: 1–35 µA.

Ionization cable, UV cable:
max. 50 m (164 ft).
Contact rating:
Valve outputs V1, V2, V3 and V4 (terminals 60, 61, 62, 63 and 64): max. 1 A each, $\cos \varphi = 1$.
Actuator outputs (terminals 65, 66 and 67):
max. 1 A each, $\cos \varphi = 1$.
Air valve output (terminal 65): max. 1 A, $\cos \varphi = 1$.
Ignition transformer (terminal 51): max. 2 A.
Total current for the simultaneous activation of the valve outputs (terminals 60, 61, 62, 63 and 64) and of the ignition transformer (terminal 51), protected by F1/F2: max. 2.5 A.
Total current for the simultaneous activation of the outputs for air valve and actuator (terminals 65, 66 and 67): max. 2 A.
Signalling contact for operating and fault signals:
max. 1 A, $\cos \varphi = 1$ (external fuse required).
Number of operating cycles:
The fail-safe outputs (valve outputs V1, V2, V3 and V4) and the air valve output are monitored for correct functioning and are thus not subject to a max. number of operating cycles.
Control actuator (terminals 64, 65, 66 and 67):
1,000,000,
signalling contact for operating signals
(terminals 95, 96 and 97):
1,000,000,
signalling contact for fault signals
(terminals 80, 81 and 82):
max. 25,000,
On/Off button:
max. 10,000,
Reset/Information button:
max. 10,000.
Input voltage of signal inputs:

Rated value	120 V AC	230 V AC
Signal "1"	80 – 132 V	160 – 253 V
Signal "0"	0 – 20 V	0 – 40 V

Signal input current:

Signal "1"	max. 5 mA
------------	-----------

Fuses, replaceable, F1/F2/F3: T 3.15A H, pursuant to IEC 60127-2/5.
Does not meet the requirements for safety extra-low voltage (SELV/PELV).

Designed lifetime

This information on the designed lifetime is based on using the product in accordance with these operating instructions. Once the designed lifetime has been reached, safety-relevant products must be replaced. Designed lifetime (based on date of manufacture): 10 years.
You can find further explanations in the applicable rules and regulations and on the afecor website (www.afecor.org).
This procedure applies to heating systems. For thermoprocessing equipment, observe local regulations.

Safety instructions

Scope of application: as set out in "Industrial thermoprocessing equipment – Part 2: Safety requirements for combustion and fuel handling systems" (EN 746-2) when used with fuels and oxidants. The BCU 4 is suitable for continuous operation (pursuant to EN 298:2012-12, Section 3.126) and for intermittent operation (pursuant to EN 298:2012-11, Section 3.127).
Action:
Type 2 pursuant to EN 60730-1.
Behaviour under fault conditions:
The output signals are switched off electronically in accordance with the criteria of automatic action type B.V.AC.AD.AF.AG.AH (pursuant to EN 60730-2-5:2015, Section 6.4.3.).
Maximum reaction time in the event of a flame failure: This corresponds to the safety time during operation and can be parameterized to between 1 and 4 s.
Software class:
Corresponds to software class C which operates in a similar double-channel architecture with comparison.

Interfaces

Type of wiring:
Attachment type X to EN 60730-1.
Grounding: via PE wire connection.
Internal voltages are neither SELV nor PELV.
Floating contacts meet the requirements for SELV.

Communication

Safety over EtherCAT® technology (FSoE, FailSafe over EtherCAT) is used for K-SafetyLink communication. Safety over EtherCAT® is a registered trademark and patented technology licensed by Beckhoff Automation GmbH, Germany.



The K-SafetyLink technology complies with SIL 3 in accordance with EN 61508 and is standardized pursuant to IEC 61784-3-12 and ETG 5100. Safety over EtherCAT® uses the fail-safe principle which means that a safe state is restored in the case of an inactive signal. In the case of communication errors, all signals are interpreted as inactive. Safety-relevant data are transmitted on the basis of the black channel principle.
All devices connected to the communications system must meet the requirements for safety extra-low voltage (SELV/PELV) (EN 60730-1).
The end user must ensure the unique setting and parameterization of the SafetyLink address within the Ethernet network.
The setting and assignment of the addresses must be verified before commissioning using the verification procedure described in the extended documentation.

Logistics

Transport

Protect the unit from external forces (blows, shocks, vibration).

Transport temperature: see page 29 (Technical data).

Transport is subject to the ambient conditions described.

Report any transport damage on the unit or packaging without delay.

Check that the delivery is complete, see page 3 (Part designations).

Storage

Storage temperature: see page 29 (Technical data).

Storage is subject to the ambient conditions described.

Storage time: 6 months before using for the first time. If stored for longer than this, the overall service life will be reduced by the corresponding amount of extra storage time.

Accessories

BCSoft


The current software can be downloaded from our Internet site at <http://www.docuthek.com>. To do so, you need to register in the DOCUTHEK.

Opto-adaptor PCO 200

Including BCSoft CD-ROM,
Order No. 74960625.

Connection plug set

For wiring the BCU.

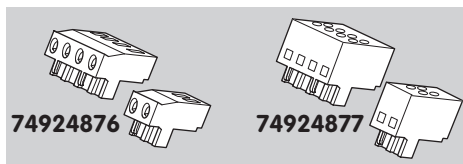


Connection plugs with screw terminals,
Order No. 74924876.

Connection plugs with spring force terminals,
Order No. 74924877.


Fastening set

- ▷ To ensure a gap between the BCU and the mounting surface with higher temperatures.

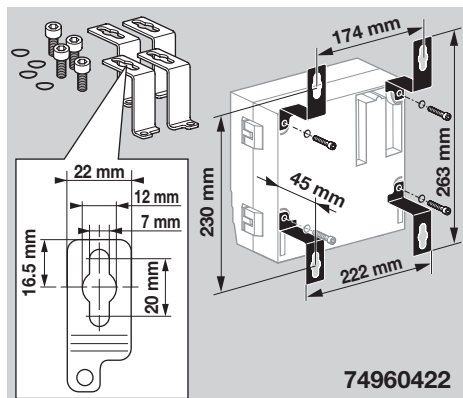


External securing bars

- ▷ The external securing bars are screwed on from inside the unit.

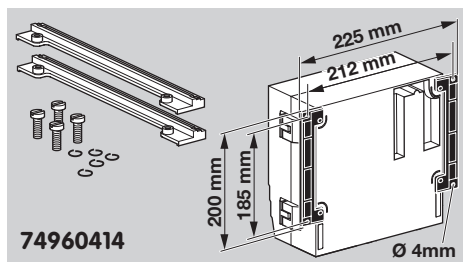

Bus module BCM 400

Communication interface for connecting the BCU to an automation system.

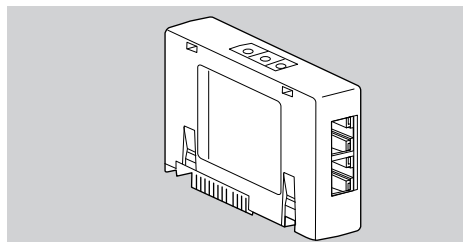

Bus module	Bus system	Order No.
BCM 400S0B1/1-0	PROFIBUS	74960690
BCM 400S0B2/3-0	PROFINET	74960691
BCM 400S0B3/3-0	EtherNet/IP	74960692

Set of language stickers

To affix to the cover, with program step/fault message descriptions in English, French, Dutch, Spanish and Italian,
Order No. 34336970.

Certification

Declaration of conformity



We, the manufacturer, hereby declare that the products BCU 460, BCU 465 and BCU 480 comply with the requirements of the listed Directives and Standards.

Directives:

- 2014/30/EU¹⁾
- 2014/35/EU

Regulation:

- (EU) 2016/426 – GAR

Standards:


- EN 298:2012
- EN 1643:2014
- EN 60730-2-5
- EN 61508:2010, suitable for SIL 3

The production is subject to the surveillance procedure pursuant to Regulation (EU) 2016/426 Annex III paragraph 3.
Elster GmbH

Scan of the Declaration of conformity (D, GB) – see www.docuthek.com

¹⁾ There is no need for any additional EMC measurement when installed.

SIL, PL



For systems up to SIL 3 pursuant to EN 61508. Pursuant to EN ISO 13849-1, Table 4, the BCU can be used up to PL e.

Safety-specific characteristic values	
Diagnostic coverage DC	91.3%
Type of subsystem	Type B to EN 61508-2:2010
Mode of operation	High demand mode pursuant to EN 61508-4:2010
Mean probability of dangerous failure PFH _D	32.9 × 10 ⁻⁹ 1/h on BCU 4xx..F1, 38.3 × 10 ⁻⁹ 1/h on BCU 4xx..F3
Mean time to dangerous failure MTTF _d	1/PFH _D
Safe failure fraction SFF	99.0%
Mean probability of dangerous failure PFH _D (70°C) of individual safety functions	
Burner control with 2 gas valves	23.2 × 10 ⁻⁹ 1/h
Burner control with 3 gas valves	28.5 × 10 ⁻⁹ 1/h
Valve check	15.0 × 10 ⁻⁹ 1/h
Proof of closure	3.3 × 10 ⁻⁹ 1/h
Flame control	8.4 × 10 ⁻⁹ 1/h
Temperature monitoring	2.2 × 10 ⁻⁹ 1/h
Air pressure switch monitoring	3.3 × 10 ⁻⁹ 1/h
Gas pressure switch monitoring	3.3 × 10 ⁻⁹ 1/h
Purge with air pressure switch	4.3 × 10 ⁻⁹ 1/h
K-SafetyLink	1.0 × 10 ⁻⁹ 1/h
Safety interlocks (limits)	2.2 × 10 ⁻⁹ 1/h
Valve check with redundant pressure switch	12.9 × 10 ⁻⁹ 1/h
Air pressure switch monitoring with red. pressure switch	1.3 × 10 ⁻⁹ 1/h
Gas pressure switch monitoring with red. pressure switch	1.3 × 10 ⁻⁹ 1/h
Purge with red. air pressure switch	2.3 × 10 ⁻⁹ 1/h

FM approved



Factory Mutual (FM) Research Class:
7610 “Combustion Safeguards and Flame Sensing
Systems”

Suitable for applications pursuant to NFPA 86.

Eurasian Customs Union



The products BCU 460, BCU 465 and BCU 480
meet the technical specifications of the Eurasian
Customs Union.

Directive on the restriction of the use of hazardous substances (RoHS) in China

Scan of the Disclosure Table China RoHS2 – see
certificates at www.docuthek.com

Disposal

Devices with electronic components:

WEEE Directive 2012/19/EU – Waste Electrical and Electronic Equipment Directive



At the end of the product life (number of operat-
ing cycles reached), dispose of the packaging and
product in a corresponding recycling centre. Do not
dispose of the unit with the usual domestic refuse. Do
not burn the product. On request, old units may be
returned carriage paid to the manufacturer in accord-
ance with the relevant waste legislation requirements.

Contact

If you have any technical questions, please contact your local branch office/agent. The addresses are available on the Internet or from Elster GmbH.

We reserve the right to make technical modifications in the interests of progress.

Honeywell

**krom//
schroder**

Elster GmbH
Strotheweg 1, D-49504 Lotte (Büren)
Tel. +49 541 1214-0
Fax +49 541 1214-370

hts.lotte@honeywell.com, www.kromschroeder.com